



Samsung Galaxy S4 Active Microphone Replacement

Replacing the microphone in the Samsung Galaxy S4 Active by gaining access to the daughterboard.

Written By: Miguel Labrador



Step 1 — Open Back Cover




- Use plastic opening tool to pry open back cover.

Step 2 — Pull Out Battery





- Use the plastic opening tool to take out the battery.
- Remove SD card and SIM card.

Step 3 — Remove Plastic Midframe

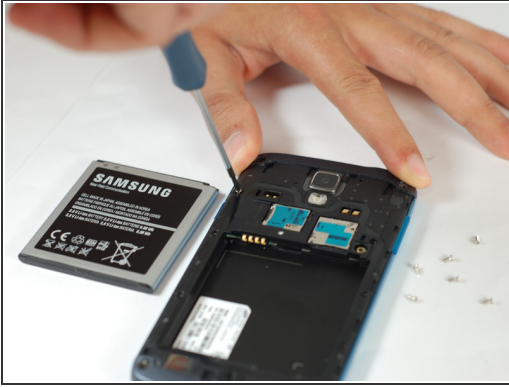

- Unscrew all screws.
- Pry off midframe with plastic opening tool.

Step 4 — Remove Daughterboard

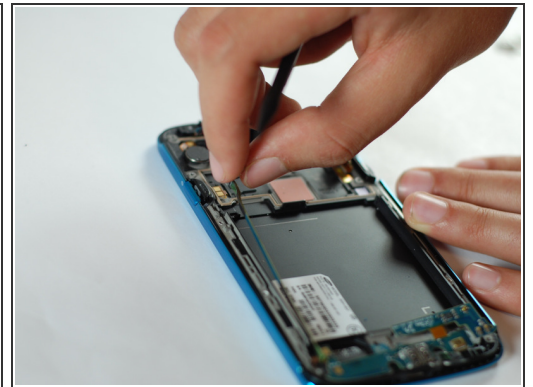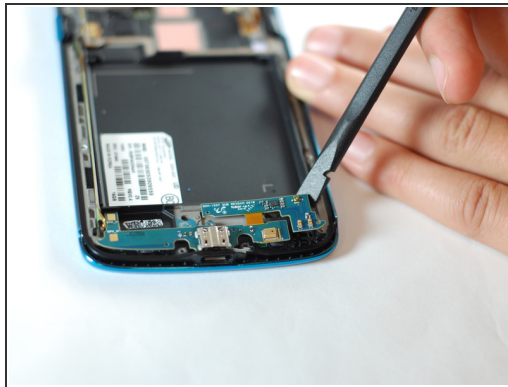

- Unscrew screws holding daughterboard in place.
- Carefully remove daughterboard with plastic opening tool.
- The microphone is embedded in the daughterboard. This means the entire daughterboard must be replaced.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-07 09:52:58 PM.